

FSANL Table-Saw Wood Kickback Template



What is Table-Saw Wood Kickback?

Table-Saw Wood Kickback is when debris from the operation of a table-saw is thrown back at the user.

What causes Table-Saw Wood Kickback?

There are several factors that can cause Table-saw wood Kickback, but are not limited to:

- Pitched, knotted and/or warped wood
- Wet wood
- Wood not secured against the fence
- Angle of the blade is towards the fence, rather than away
- Dull, dirty, or warped blades

What are ways to prevent Table-Saw Wood Kickback?

- Keep your blades clean and sharp. If they become warped or broken, replace them before you continue work.
- Do not over-work the blades and let them run hot. A heated blade can warp in mid-use and cause kickback.
- Keep the wood firmly against the fence when feeding the blade.
- Try to avoid using knotty, warped and pitched wood when using the table-saw.
- Do not free-hand cut.

When changing blades or making repairs ensure equipment is properly locked out.

This template is only guide. Please follow all manufacturer instructions and have an experienced operator show you how to properly use this equipment.